













 







 





 

 

 



 







 







 

































 





 



 




 




Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 Nicam/A2	 Shift + Audio / Lang I/II	 1	 1
 Sleep	 Sleep / Timer	 2	 2
 Aspect	 Zoom / Size	 3	 3
 USB/CR	 Shift + 8	 4	 4
 Display	 Display / Media	 5	 5
 Auto	 Smart / List	 6	 6
 PMode	 Picture / Format	 7	 7
 SMode	 Sound / Title	 8	 8
 DTV	 D.Menu / Top	 9	 9
 Source	 AV / Input / RDS	 0	 0
 Up	 Up	 -/--	 Guide / EPG / -/--
 Left	 Left	 Back	 Back / Return
 Enter	 OK	 CH+	 CH+ / Page+
 Right	 Right	 Info	 Info / Angle
 Down	 Down	 Audio	 Audio / Lang I/II





Original	Substituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Substituto
