 

 

 
 

 



 
 


 

 

 
 
 
 
 
 
 
 

 
 
 


 
 
 

 
 




 
 
 


 

 


 
 

 
 



 


 

 



Original	Substituto	Original	Substituto
	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Repeat		Text
	Disc Menu		D. Menu
	Home		Smart
	Title PopUp		Media

Original	Substituto	Original	Substituto
	Back		Back
	Info/Display		Info
	Search		TV/R
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	>>		>>
	<<		<<
	Stop		Stop
	Enter		Ok
	Left		Left
	Right		Right
	Up		Up
	Down		Down
	Red		Red
	Green		Green





Original	Substituto
 Yellow	 Yellow
 Blue	 Blue
 Marker	 Options
 Zoom	 Shift + Eject
 Power Tv	 Shift + Power
 AV Input Tv	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 PR/CH+ Tv	 Ch +
 PR/CH- Tv	 Ch -

Original	Substituto

