











Original	Substituto
Standby	Power
DTV/VCR	AV / Input / RDS
Mute	Mute / Dimmer
Info	Info / Angle
Pause	Pause / Step / Freeze
Menu	Menu / Home
EPG	Guide / EPG / -/--
Exit	Exit / Cancel / Clear
Up	Up
CH+	CH+ / Page+
Left	Left
Vol-	Vol-
OK	OK
Vol+	Vol+
Right	Right
CH-	CH- / Page-
Down	Down

Original	Substituto
Favorite	Fav / Marker / PC
1	1
2	2
3	3
Game	Smart / List
4	4
5	5
6	6
Recall	Back / Return
7	7
8	8
9	9
0	0
Tv/Radio	TV/Radio /
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto





Original	Substituto	Original	Substituto
	Red  Red / Netflix / Search		
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		

Original	Substituto

