

 





 
 

 

 

 
 



Original	Substituto	Original	Substituto
	Power		Power
	Play		Play
	Stop		Play
	Pause		Blue
	<<		Ch +
	>>		Ch -
	I<<		Vol +
	>>I		Vol -
	TV/TXT		Menu
	Cancel		Source
	Reveal		DVB
	Hold		Exit
	Size		Ok
	Subpage		Up
	Index		Down
	Red		Right
	Green		Left
			1
			2





	Original	Substituto	
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Pre Ch
	Picture		Shift + Format
	Sound		Shift + Dual
	Nicam/A2		Options
	Mute		Mute
	Sleep		Sleep
	Tv/Radio		TV/R
	FAV		Shift + Pre Ch

	Original	Substituto	
	FAV+		Shift + Ch +
	FAV-		Shift + Ch -
	Pic Format		Format
	Subtitle		Subt
	Text		Shift + Text
	Display		Info
	Language		Dual
	EPG		Guide

