

 

 

 

 

 

 

 

 



 

 

 





 







Original	Substituto	Original	Substituto
	Power		Power
	Input TV		TV/Radio /
	Input Av		AV / Input / RDS
	Guide		Guide / EPG / -/--
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[+]/Aspect		Picture / Format

Original	Substituto	Original	Substituto
	Link Vieta		Smart / List
	Option		Setup / OPT /
	Direct Tv Rec		Shift + Rec / Rec Mode
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0/VCR		0
	0/VCR		Shift + 4 / Shift + 4
	Mute		Mute / Dimmer
	CH+		CH+ / Page+










Original	Substituto
Vol+	Vol+
CH-	CH- / Page-
Vol-	Vol-
[≡]/Text	Text / Goto
[≡♦]/STTL	Subtitle / EQ
[≡i]/Index	Display / Media
[≡+]/Hold	Shift + Stop /
Power DVD	Shift + Power
Rec DVD	Rec / Rec Mode
Programme Down	Shift + CH- /
Programme Up	Shift + CH+ /
<</I<< DVD	<< / Tune-
<</I<< DVD	I<< / Preset-
>>/>>I DVD	>>I / Preset+
>>/>>I DVD	>> / Tune+
Stop DVD	Stop / Hold
Pause/Step DVD	Pause / Step / Freeze

Original	Substituto
Play DVD	Play / Slow





Original	Substituto	Original	Substituto
 Power DVD	 Power		
 Rec DVD	 Rec / Rec Mode		
 Programme Down	 CH- / Page-		
 Programme Up	 CH+ / Page+		
 I<< DVD	 I<< / Preset-		
 I<< DVD	 << / Tune-		
 >>I DVD	 >>I / Preset+		
 >>I DVD	 >> / Tune+		
 Stop DVD	 Stop / Hold		
 Pause/Step DVD	 Pause / Step / Freeze		
 Play DVD	 Play / Slow		





Original	Substituto
Power VCR	Power
Rec VCR	Rec / Rec Mode
Programme Down	CH- / Page-
Programme Up	CH+ / Page+
<</I<< VCR	I<< / Preset-
>>/>>I VCR	<< / Tune-
Pause/Step VCR	>> / Tune+
Play VCR	>>I / Preset+
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow

Original	Substituto

