 



 

 
 
 







 

 



 

 
 

















 
















 







 

 



 



Original	Substituto	Original	Substituto
	Power		Power
	3D		Shift + 3
	TV		Shift + 1
	TV		TV/ Radi o /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Eco		Di spl ay / Medi a
	0		0
	Source		AV / Input / RDS
	Vol +		Vol +
	Mute		Mute / Di mmer
	P+		CH+ / Page+
	Vol -		Vol -
	P-		CH / Page-
	Info		Info / Angl e
	Opti on		Set up / OPT /
	Smart Tv		Smart / Li st
	Gui de		Gui de / EPG / - / -
	Menu		Menu / Home
	Up		Up
	Lef t		Lef t
	OK		OK
	Ri ght		Ri ght
	Back		Back / Ret urn
	Down		Down
	Exi t		Exi t / Cancel / Cl ear
	Zoom		Shi ft + Down





Original	Substituto
 Zoom+	 Shift + Up
 @ Home	 D. Menu / Top
 Sleep	 Sleep / Timer
 Pre-CH	 Shift + Back / Return
 FAV	 Fav / Marker / PC
 List	 Shift + Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CD/Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Got o
 I <	 I << / Preset-
 Stop	 Stop / Hol d
 Play	 Play / Sl ow
 Pause	 Pause / Step / Freeze

Original	Substituto
 >	 >> / Preset +
 <<	 << / Tune-
 Rec	 Rec / Rec Mde
 >>	 >> / Tune+

