 

 
 
 

 
 
 
 


 




























| Original | Substituto |
|---|------------|
|  | Power |
|  | 3D |
|  | TV |
|  | TV |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | Eco |
|  | 0 |
|  | Source |
|  | Vol+ |

| Original | Substituto |
|---|------------|
|  | Mute |
|  | P+ |
|  | Vol- |
|  | P- |
|  | Info |
|  | Option |
|  | Smart Tv |
|  | Guide |
|  | Menu |
|  | Up |
|  | Left |
|  | OK |
|  | Right |
|  | Back |
|  | Down |
|  | Exit |
|  | Zoom- |

| | |
|---|------------------|
|  | Power |
|  | Shift + 3 |
|  | Shift + 1 |
|  | TV/Radio / |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | Display / Media |
|  | 0 |
|  | AV / Input / RDS |
|  | Vol+ |

| | |
|---|-----------------------|
|  | Mute / Dimmer |
|  | CH+ / Page+ |
|  | Vol- |
|  | CH- / Page- |
|  | Info / Angle |
|  | Setup / OPT / |
|  | Smart / List |
|  | Guide / EPG / -/- |
|  | Menu / Home |
|  | Up |
|  | Left |
|  | OK |
|  | Right |
|  | Back / Return |
|  | Down |
|  | Exit / Cancel / Clear |
|  | Shift + Down |





| Original | Substituto |
|----------|-----------------------------|
| Zoom+ | + Shift + Up |
| @/Home | D.Menu / Top |
| Sleep | Sleep / Timer |
| Pre-CH | + Shift + Back / Return |
| FAV | Fav / Marker / PC |
| List | + Shift + Smart / List |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| OO/Lang | Audio / Lang I/II |
| Subtitle | Subtitle / EQ |
| Text | Text / Goto |
| I< | I<< / Preset- |
| Stop | Stop / Hold |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |

| Original | Substituto |
|----------|----------------|
| >I | >>I / Preset+ |
| << | << / Tune- |
| Rec | Rec / Rec Mode |
| >> | >> / Tune+ |

