






















































 




























Original	Substituto	Original	Substituto
 Power	 Power	 9	 9
 A1	 Shift + Smart / List	 Tv/Radio	 TV/Radio /
 V-Format	 Picture / Format	 0/Zoom	 0
 Timer	 Sleep / Timer	 0/Zoom	 Zoom / Size
 Mute	 Mute / Dimmer	 Recall	 Back / Return
 Tms	 AV / Input / RDS	 Find	 Shift + Red / Netflix /
 B2	 Shift + Display / Media	 Vol-	 Vol-
 F1	 Shift + 1	 Page-	 CH- / Page-
 Tv/Sat	 Smart / List	 SAT	 Display / Media
 1	 1	 Rec	 Rec / Rec Mode
 2	 2	 Vol+	 Vol+
 3	 3	 Page+	 CH+ / Page+
 4	 4	 FAV	 Fav / Marker / PC
 5	 5	 Menu	 Menu / Home
 6	 6	 Up	 Up
 7	 7	 Info	 Info / Angle
 8	 8	 Left	 Left

Original	Substituto	Original	Substituto
 9	 9	 9	 9
 Tv/Radio	 TV/Radio /	 0/Zoom	 0
 0/Zoom	 Zoom / Size	 Recall	 Back / Return
 Find	 Shift + Red / Netflix /	 Vol-	 Vol-
 Page-	 CH- / Page-	 SAT	 Display / Media
 Rec	 Rec / Rec Mode	 Vol+	 Vol+
 Page+	 CH+ / Page+	 FAV	 Fav / Marker / PC
 Menu	 Menu / Home	 Up	 Up
 Info	 Info / Angle	 Left	 Left





Original	Substituto	Original	Substituto
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	EPG		Guide / EPG / -/--
	Folder		Eject / Surround
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<</Page-		<< / Tune-
	<</Page-		Shift + CH- /
	>>/Page+		>> / Tune+
	>>/Page+		Shift + CH+ /
	<I		Shift + I<< / Preset-
	I>		Shift + >>I / Preset+

Original	Substituto	Original	Substituto
	Play Mode		Sound / Title
	USB		Shift + 8
	Red		Red / Netflix / Search
	Audio		Audio / Lang I/II
	Green		Green / APP / Repeat
	Option		Setup / OPT /
	TXT		Text / Goto
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

