 

 



 

 

 

 

 

 

 

 

 
 




 







| Original  | Substituto | Original  | Substituto               |
|---|------------|---|--------------------------|
|    | Standby    |    | Power                    |
|    | Auto       |    | Smart / List             |
|    | Mute       |    | Mute / Dimmer            |
|    | 1          |    | 1                        |
|    | 2          |    | 2                        |
|    | 3          |    | 3                        |
|    | 4          |    | 4                        |
|    | 5          |    | 5                        |
|    | 6          |    | 6                        |
|   | 7          |   | 7                        |
|  | 8          |  | 8                        |
|  | 9          |  | 9                        |
|  | 0          |  | 0                        |
|  | Recall     |  | Back / Return            |
|  | Vol+       |  | Vol+                     |
|  | Aspect     |  | Shift + Picture / Format |

| Original  | Substituto | Original  | Substituto            |
|---|------------|---|-----------------------|
|    | Audio      |    | Audio / Lang I/II     |
|    | CH+        |    | CH+ / Page+           |
|    | Vol-       |    | Vol-                  |
|    | Display    |    | Display / Media       |
|    | CH-        |    | CH- / Page-           |
|    | Up         |    | Up                    |
|    | Left       |    | Left                  |
|    | OK         |    | OK                    |
|    | Right      |    | Right                 |
|   | Menu       |   | Menu / Home           |
|  | Down       |  | Down                  |
|  | Exit       |  | Exit / Cancel / Clear |
|  | Input      |  | AV / Input / RDS      |
|  | P.Mode     |  | Picture / Format      |
|  | S.Mode     |  | Sound / Title         |
|  | Sleep      |  | Sleep / Timer         |
|  | FAV        |  | Fav / Marker / PC     |





| Original  | Substituto  |
|---|---|
|  FAV-      |  Shift + CH- /             |
|  FAV+      |  Shift + CH+ /             |
|  EPG       |  Guide / EPG / -/--        |
|  Text      |  Text / Goto               |
|  Hold      |  Shift + Stop /            |
|  Tv/Radio  |  TV/Radio /                |
|  Subtitle  |  Subtitle / EQ             |
|  Index     |  Info / Angle              |
|  Size      |  Zoom / Size               |
|  Reveal   |  Setup / OPT /            |
|  Subpage |  Eject / Surround        |
|  Media   |  Shift + Display / Media |
|  Play    |  Play / Slow             |
|  Pause   |  Pause / Step / Freeze   |
|  <<      |  << / Tune-              |
|  >>      |  >> / Tune+              |
|  Rec     |  Rec / Rec Mode          |

| Original   | Substituto  |
|--|---|
|  Stop   |  Stop / Hold                 |
|  I<<    |  I<< / Preset-               |
|  >>I    |  >>I / Preset+               |
|  Red    |  Red / Netflix / Search      |
|  Green  |  Green / APP / Repeat        |
|  Yellow |  Yellow / YouTube / Repeat   |
|  Blue   |  Blue / Prime Video / Random |

