




 






 















 



Original	Substituto	Original	Substituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	V+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Substituto	Original	Substituto
	V-		Vol-
	World/Internet		Smart / List
	P-		CH- / Page-
	Menu		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Music/Camera		Display / Media
	TV Guide		Guide / EPG / -/-
	*/O		Shift + 1
	*/Q		Shift + 2





Original	Substituto	Original	Substituto
 [=]/Text	 GOTO TEXT Text / Goto		
 Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 LANG. Lang	 LANG I/II AUDIO Audio / Lang I/II		
 [=]..	 TITLE SOUND Sound / Title		
 [-O-]	 OPT-TOOLS SETUP Setup / OPT /		
 <<	 TUNE- << / Tune-		
 Pause	 STEP-FREEZE Pause / Step / Freeze		
 >>	 TUNE+ >> / Tune+		
 Rec	 REC MODE Rec / Rec Mode		
 ▶ Play	 SLOW ▶ Play / Slow		
 ■ Stop	 HOLD ■ Stop / Hold		

Original	Substituto	Original	Substituto

