



Original	Substituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV
	0
	Recall
	V+
	Mute
	P+

Substituto	Original
Power	
AV / Input / RDS	
1	
2	
3	
4	
5	
6	
7	
8	
9	
TV/Radio /	
0	
Fav / Marker / PC	
Vol+	
Mute / Dimmer	
CH+ / Page+	

Original	Substituto
	V-
	World/Internet
	P-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Music/Camera
	TV Guide
	*/O
	*/Q

Substituto	Original
Vol-	
Smart / List	
CH- / Page-	
Menu / Home	
D.Menu / Top	
Up	
Left	
OK	
Right	
Down	
Back / Return	
Exit / Cancel / Clear	
Info / Angle	
Display / Media	
Guide / EPG / -/-	
Shift + 1	
Shift + 2	





Original	Substituto
 [=]/Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Lang	 Audio / Lang I/II
 [=]..	 Sound / Title
 [-O-]	 Setup / OPT /
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Substituto

