







Original	Substituto	Original	Substituto
Power	Power	P-	Ch -
1	1	[=..]/Source	AV
2	2	[=i]/Menu	Menu
3	3	(+)	Media
4	4	[=?]/Info/[+]	Info
5	5	Exit	Exit
6	6	Up	Up
7	7	Right	Right
8	8	Down	Down
9	9	Left	Left
0	0	Enter	Ok
[=+]/-/--	Guide	TTX/MIX	Text
Recall/Auto/Pre-C	Pre Ch	[=o]/Dual I-II	Dual
Mute	Mute	[=◇] Format	Format
Vol+	Vol +	[=◇]/Sleep	Sleep
Vol-	Vol -	Red	Red
P+	Ch +	Green	Green





Original		Substituto		Original		Substituto	
	Yellow		Yellow				
	Blue/P.Mode		Blue				

