
 
 
 

 






 










 

















 


 

 
 




 


 


 
 









 





Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 II
 3	 3	 GUIDE	 ■
 4	 4	 CLEAR EXIT	 ●
 5	 5	 Up / CH + / I<<	 ◀
 6	 6	 Down / CH - / >>I	 ▶
 7	 7	 Right / Vol +	 SOUND
 8	 8	 Left / Vol -	 AD
 9	 9	 OK	 SETTINGS
 0	 0	 Up / CH + / I<<	 LIST
 FAV	 Shift + Pre Ch	 Down / CH - / >>I	 DUAL
 Recall	 Pre Ch	 Up / CH + / I<<	 SUBT
 Game	 Media	 Down / CH - / >>I	 OPT
 Auto	 Smart	 Left / Vol -	 PROG
 Info	 Info	 Right / Vol +	 SEARCH
		 Up / CH + / I<<	 PICTURE
		 Down / CH - / >>I	 ECO
		 Left / Vol -	 SLEEP
		 Right / Vol +	 TV/R
		Red / Zoom	 FORMAT
		Green / Lan/Audio	 3D
		Yellow /	 TIMER
			 E-MANUAL
			 REPEAT
			 ZOOM
			 TEXT
			 AV



Play/Pause

