




 
Original	Substituto	Original	Substituto
Power	Power	Menu	Menu
Mute	Mute	EPG	Guide
1	1	Exit	Exit
2	2	Up / CH + / I<<	Up
3	3	Down / CH - / >>I	Down
4	4	Right / Vol +	Right
5	5	Left / Vol -	Left
6	6	OK	Ok
7	7	Up / CH + / I<<	I<<
8	8	Down / CH - / >>I	>>I
9	9	Up / CH + / I<<	Ch +
0	0	Down / CH - / >>I	Ch -
FAV	SHIFT +  FAV Shift + Pre Ch	Left / Vol -	Vol -
Recall	FAV  PRE-CH Pre Ch	Right / Vol +	Vol +
Game	APP  MEDIA Media	ZOOM Red / Zoom	Red
Auto	HOME  SMART Smart	LAN/AUDIO Green / Lan/Audio	Green
Info	DISPLAY  INFO Info	PLAY/PAUSE Yellow /	Yellow

Original	Substituto	Original	Substituto
Power	Power	Menu	Menu
Mute	Mute	EPG	Guide
1	1	Exit	Exit
2	2	Up / CH + / I<<	Up
3	3	Down / CH - / >>I	Down
4	4	Right / Vol +	Right
5	5	Left / Vol -	Left
6	6	OK	Ok
7	7	Up / CH + / I<<	I<<
8	8	Down / CH - / >>I	>>I
9	9	Up / CH + / I<<	Ch +
0	0	Down / CH - / >>I	Ch -
FAV	SHIFT +  FAV Shift + Pre Ch	Left / Vol -	Vol -
Recall	FAV  PRE-CH Pre Ch	Right / Vol +	Vol +
Game	APP  MEDIA Media	ZOOM Red / Zoom	Red
Auto	HOME  SMART Smart	LAN/AUDIO Green / Lan/Audio	Green
Info	DISPLAY  INFO Info	PLAY/PAUSE Yellow /	Yellow



Play/Pause



	Original	Substituto	
	Blue / Text		Blue
	Red / Zoom		Eject
	Green / Lan/Audio		Dual
	Yellow /		Play
	Yellow /		Pause
	Blue / Text		Text
	<< / Tv/Radio		<<
	<< / Tv/Radio		TV/R
	>> / Subtitle		>>
	>> / Subtitle		Subt

Original	Substituto

