



Original	Substituto	Original	Substituto
 Power	 Power	 8	 8
 Open / Close	 Eject	 9	 9
 TV / DTV	 TV/R	 +/-	 Shift + Guide
 Line	 AV	 0	 0
 DVD	 Media	 PRE	 Pre Ch
 TTX	 Text	 Vol +	 Vol +
 PIP ON / OFF	 Shift + Power	 Vol -	 Vol -
 PIP Swap	 Shift + Back	 Prog +	 Ch +
 PIP Source	 Shift + AV	 Prog -	 Ch -
 PIP Sound	 Shift + Dual	 M/S	 Subt
 1	 1	 Still	 Shift + Pause
 2	 2	 Sleep	 Sleep
 3	 3	 TV Menu	 Menu
 4	 4	 P.STD	 Format
 5	 5	 S.STD	 Shift + Subt
 6	 6	 P.Size	 Shift + Format
 7	 7	 Exit / Cancel	 Exit





Original	Substituto
	Up
	Right
	Down
	Left
	OK
	MUTE
	SHIFT + INFO
	STOP
	PLAY MODE
	PAUSE
	Fast Left
	Fast Right
	Half Fast Left
	Half Fast Right
	A
	B
	C

Original	Substituto
	D
	SHIFT + REPEAT TEXT
	SHIFT + SEARCH TV/R
	SOUND DUAL
	ECO 3D
	RETURN BACK
	SHIFT + TOP MENU MENU
	DISC NAV LIST
	SETTINGS OPT
	GUIDE
	SHIFT + CLEAR EXIT
	DISPLAY INFO

