



Original	Substituto
 Power	 Power
 Ambilight	 Display / Media
 List	 Smart / List
 Tv Guide	 Guide / EPG / -/--
 Voice	 Audio / Lang I/II
 Top Pics	 Picture / Format
 Sources	 AV / Input / RDS
 [ ∴ ]	 D.Menu / Top
 Exit/TV	 Exit / Cancel / Clear
 Info	 Info / Angle
 Up	 Up
 Options	 Setup / OPT /
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down

Original	Substituto
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Netflix	 Shift + Red / Netflix /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Substituto	Original	Substituto
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	Text		Text / Goto
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+

