





 





 
















 



Original	Substituto
 Internet	 Smart / List
 Power	 Power
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+
 Screen	 Picture / Format
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Presets	 Setup / OPT /
 EPG	 Guide / EPG / -/--
 Text	 Text / Goto
 FAV	 Fav / Marker / PC

Original	Substituto
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Swap	 D.Menu / Top
 Menu	 Menu / Home
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Up	 Up





Original		Substituto	
	V+		Vol+
	Left		Left
	Ok		OK
	Right		Right
	P-		CH- / Page-
	Down		Down
	V-		Vol-
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Multimedia		Display / Media
	My Button1		Eject / Surround
	My Button2		TV/Radio /
	Info		Info / Angle

Original		Substituto	

