



Original	Substituto
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 HDD	 Shift + 7
 AV/Input	 AV / Input / RDS
 AV/Input Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 CH- / Page-
 7	 7
 8	 8

Original	Substituto
 9	 9
 Vol+ Tv	 Vol+
 Dubbing	 Blue / Prime Video / Random
 0	 0
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Clear	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Timer Rec	 Sleep / Timer
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 >>>I	 >>>I / Preset+
 II	 Pause / Step / Freeze



