 

















 

















 




 













 
 

















 

 



















Original	Substituto
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Zoom / Size
	 Subtitle / EQ
	 Audio / Lang I/II
	 Shift + Info / Angle
	 Setup / OPT /

Original	Substituto
	 Display / Media
	 Smart / List
	 Mute / Dimmer
	 Info / Angle
	 Back / Return
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Guide / EPG / -/--
	 D.Menu / Top
	 Text / Goto

 

















 





















 


Original	Substituto	Original	Substituto
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+






 




 

 





 













Original	Substituto
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Zoom / Size
	 Subtitle / EQ
	 Audio / Lang I/II
	 Shift + Info / Angle
	 Setup / OPT /

Original	Substituto
	 Display / Media
	 Smart / List
	 Mute / Dimmer
	 Info / Angle
	 Back / Return
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Guide / EPG / -/--
	 D.Menu / Top
	 Menu / Home

 

















 























Original	Substituto	Original	Substituto
 TXT/Menu	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [<>]	 Shift + Zoom /		
 Rec/ >	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 <	 << / Preset-		
 >	 >> / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		






 





 














 





Original	Substituto
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Zoom / Size
	 Subtitle / EQ
	 Audio / Lang I/II
	 Shift + Info / Angle
	 Setup / OPT /

Original	Substituto
	 Display / Media
	 Smart / List
	 Mute / Dimmer
	 Info / Angle
	 Back / Return
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Guide / EPG / -/--
	 D.Menu / Top
	 Text / Goto

 

























 





 







 





 
 








 
 



Original	Substituto	Original	Substituto
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original	Substituto
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Zoom / Size
	 Subtitle / EQ
	 Audio / Lang I/II
	 Shift + Info / Angle
	 Setup / OPT /

Original	Substituto
	 Display / Media
	 Smart / List
	 Mute / Dimmer
	 Info / Angle
	 Back / Return
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Guide / EPG / -/--
	 D.Menu / Top
	 Text / Goto





Original	Substituto	Original	Substituto
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<		<< / Preset-
	>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

