






 









 











 







 



 


 

 
 
 


 

 



 
 


 
 




 



 









 





 



 






Original	Substituto	Original	Substituto
 Power	 Power	 EPG	 Guide
 Mute	 Mute	 Sat	 Smart
 1	 1	 Exit	 Exit
 2	 2	 Up	 Up
 3	 3	 Prog +	 Ch +
 4	 4	 Down	 Down
 5	 5	 Prog -	 Ch -
 6	 6	 Right	 Right
 7	 7	 Vol +	 Vol +
 8	 8	 Left	 Left
 9	 9	 Vol -	 Vol -
 0	 0	 Ok	 Ok
 Pause	 Pause	 TV / Radio	 TV/R
 Recall	 Back	 Zoom	 Eject
 Fav	 Pre Ch	 Page -	 I<<<
 Menu	 Menu	 Page -	 <<<
 i	 Info	 PIP	 List

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 SHIFT	
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 <<<	 <<<	 ■	 ■
		 >>>	 >>>
 >>>	 >>>	 DISC NAV	 DISC NAV
 SOUND	 SOUND	 AD	 AD
 SETTINGS	 SETTINGS	 LIST	 LIST
 DUAL	 DUAL	 SUBT	 SUBT
 PICTURE	 PICTURE	 OPT	 OPT
 SLEEP	 SLEEP	 ECO	 ECO
 E-MANUAL	 E-MANUAL	 3D	 3D
 REPEAT	 REPEAT	 TIMER	 TIMER
 TEXT	 TEXT	 AV	 AV
 TOP MENU	 TOP MENU	 DISPLAY INFO	 DISPLAY INFO
 MENU	 MENU	 OK	 OK
 CLEAR	 CLEAR	 RETURN BACK	 RETURN BACK
 EXIT	 EXIT	 HOME SMART	 HOME SMART
 + VOL	 + VOL	 APP MEDIA	 APP MEDIA
 - VOL	 - VOL	 + CH	 + CH
 1	 1	 - CH	 - CH
 2	 2	 HOME SMART	 HOME SMART
 3	 3	 APP MEDIA	 APP MEDIA
 4	 4	 MEDIA	 MEDIA
 5	 5	 1	 1
 6	 6	 2	 2
 7	 7	 3	 3
 8	 8	 4	 4
 9	 9	 5	 5
 0	 0	 6	 6
 GUIDE	 GUIDE	 7	 7
 A	 A	 8	 8
 B	 B	 9	 9
 C	 C	 0	 0
 D	 D	 FAV	 FAV
		 PRE-CH	 PRE-CH
		 GUIDE	 GUIDE





Original	Substituto	Original	Substituto
 F1	 Options		
 Page +	 >>I		
 Page +	 >>		
 UHF	 Format		
 P/N	 3D		
 TV/SAT	 Media		
 Subtitles	 Subt		
 Red / Audio	 Red		
 Audio	 Dual		
 Green / Mosaic	 Green		
 Yellow / Clock	 Yellow		
 Text	 Text		
 Blue / Text	 Blue		

Original	Substituto	Original	Substituto

