



Original	Substituto	Original	Substituto
	Power		Power
	Tv/HDD		TV/R
	Tuner		Subt
	CAM		Media
	Guide		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	T/C		Pre Ch
	Back		Back
	HDD Browser		Smart
	Disc Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	Pause		Pause
	Play		Play
	I<</Day-		I<<
	>>/Day+		>>I
	Rec		Rec
	Back/Jump		<<
	FWD Jump		>>





Original	Substituto	Original	Substituto
 Timer	 AV		
 Edit	 Options		
 Tv Vol+	 Vol +		
 Tv Vol-	 Vol -		
 Text	 Text		
 System	 Menu		
 [i+]/Info	 Info		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

