



Original	Substituto	Original	Substituto
	Power		Power
	Tv/R		TV/R
	Input		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Exit		Exit
	Menu		Menu
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	i		Info
	Audio		Dual
	Sub		Subt
	Guide		Guide
	TXT		Text
	Back		Back
	Pause		Pause
	F1		List





Original	Substituto	Original	Substituto
	Power		Power
	TV/R		TV/R
	Source		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Menu		Menu
	Exit		Exit
	P+		Ch +
	P-		Ch -
	V+		Vol +
	V-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	i		Info
	Audio		Dual
	Sub		Subt
	Guide		Guide
	TXT		Text
	↔		Back
	Pause		Pause
	F1		Options



