


 
 
 
 
 

 
 
 
 


 








Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Del		Pre Ch
	Input Select		AV
	Select Drive		D. Menu
	Cast Vieta		Media
	Function Menu		Menu
	Direct Navigator		List

Original	Substituto	Original	Substituto
	Guide		Guide
	Return		Back
	Option		Options
	Exit		Exit
	i / Status		Info
	Pause / Pause Live Tv		Pause
	Stop		Stop
	Play/x1.3		Play
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Prog/Check		Sleep
	OK		Ok
	Up		Up
	Down		Down
	Right		Right





Original	Substituto	Original	Substituto
 Left	 Left	 Vol + Tv	 Vol +
 Red	 Red	 Vol - Tv	 Vol -
 Green	 Green	 AV / Input Tv	 Shift + AV
 Yellow	 Yellow	 CH + Tv	 Shift + Ch +
 Blue	 Blue	 CH - Tv	 Shift + Ch -
 Rec	 Rec	 Power Tv	 Shift + Power
 Direct Tv Rec	 TV/R	 Manual Skip +60s	 Shift + Pre Ch
 Rec Mode	 Shift + Rec	 Manual Skip -10s	 Shift + Guide
 Ext Link	 Smart		
 Audio	 Dual		
 [≡◆] / STTL	 Subt		
 [≡] / Text	 Text		
 Display	 Shift + Info		
 Chapter	 Format		
 Time Slip	 3D		
 CH/Page+	 Ch +		
 CH/Page-	 Ch -		

