 

 
 
 

 



 



 
 
 

 
 

 
 
 
 

 
 


 
 
 

 

 

 

 



 



 



 

 

 


 
 
 
 

 
 
 





Original		Substituto		Original		Substituto	
	Power		Power		Source		SRC
	Display		VOD		PIP		WIDE
	Mute		MUTE		TV		TV/R
	Video		MEDIA		PC		Shift + TV/R
	Scart		Shift + MEDIA		Sound		Audio
	1		1		Sleep		Shift + Power
	2		2		Swap		BACK
	3		3		Zoom -		Shift + LEFT
	4		4		Zoom +		Shift + RIGHT
	5		5		Vol +		VOL +
	6		6		Vol -		VOL -
	7		7		CH +		CH +
	8		8		CH -		CH -
	9		9		Menu		MENU
	0		0		Exit		EXIT
	Subpage		-/- / EPG		Up		UP
	Pre-Ch		P/C / FAV		Down		DOWN





Original	Substituto	Original	Substituto
 Right	 RIGHT		
 Left	 LEFT		
 OK	 OK		
 Red	 Red (A)		
 Green	 Green (B)		
 Yellow	 Yellow (C)		
 Blue	 Blue (D)		
 Teletext	 TEXT		
 Mix	 Shift + TEXT		
 Size	 V-FOR		
 Info	 INFO		
 Index	 OPT+		
 Subtitle	 Subt.		
 Hold	 Pause		
 Reveal	 Shift + OPT+		

