 




Original	Substituto	Original	Substituto
Standby	Power	Vol+	Vol +
Open/Close	Eject	Vol-	Vol -
1	1	CH+	Ch +
2	2	CH-	Ch -
3	3	Enter	Ok
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Red	Red
9	9	Green	Green
0	0	Yellow	Yellow
Info/Display	Info	Blue	Blue
Q-Play/Tv/Radio	TV/R	Next	>>
Menu/PgDn	Menu	Prev	<<
Setup	Options	Rew	<<
Exit/Slow	Exit	FF	>>





Original	Substituto	Original	Substituto
 Play	 Play	 Random	 Sleep
 Stop	 Stop	 Mute	 Mute
 Pause	 Pause	 USB	 Smart
 Subtitle	 Subt		
 Audio	 Dual		
 List/PBC	 List		
 Title/PgUp	 D. Menu		
 Return	 Back		
 Rec/Repeat	 Rec		
 PVR/Zoom	 Shift + Eject		
 FAV/A-B	 Pre Ch		
 Video	 AV		
 TTX/Search	 Text		
 DVD/DVB	 Media		
 Step	 Format		
 EPG/P/N	 Guide		
 Angle	 3D		

