



Original	Substituto
	Power
	PP
	Mute
	I-II
	P<P
	-/--
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Vol+
	Power
	Pre Ch
	Mute
	Dual
	Back
	Guide
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Vol +

Original	Substituto
	Vol -
	Up
	Down
	Right
	Left
	M
	PR+
	PR-
	M
	Red/Sound
	Green/Picture
	Yellow/Feature
	Blue/Install
	TV
	AV
	[≡]
	[≡o]
	Vol -
	Up
	Down
	Right
	Left
	Ok
	Ch +
	Ch -
	Menu
	Red
	Green
	Yellow
	Blue
	TV/R
	AV
	Text
	Smart



