







 



 

 

 






 












 

 

 



 







 











 







Original	Substituto	Original	Substituto
 Standby/On	 Power	 Text	 Text / Goto
 Mute	 Mute / Dimmer	 Input Select	 AV / Input / RDS
 Play	 Play / Slow	 Menu/Pop Menu	 Menu / Home
 Pause	 Pause / Step / Freeze	 Up	 Up
 Stop	 Stop / Hold	 [i+]	 Info / Angle
 Rec	 Rec / Rec Mode	 Left	 Left
 <<	 << / Tune-	 OK	 OK
 >>	 >> / Tune+	 Right	 Right
 I<<	 I<< / Preset-	 Exit	 Exit / Cancel / Clear
 >>I	 >>I / Preset+	 Down	 Down
 Audio	 Audio / Lang I/II	 Return/Back	 Back / Return
 Subtitle	 Subtitle / EQ	 Prog+	 CH+ / Page+
 Open/Close	 Eject / Surround	 Display	 Display / Media
 Timeshift	 Sleep / Timer	 Prog-	 CH- / Page-
 Sat Link	 TV/Radio /	 1	 1
 Top Menu	 D.Menu / Top	 2	 2
 Setup	 Setup / OPT /	 3	 3





Original		Substituto	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Rec Mode		Shift + Rec / Rec Mode
	→/V.Replay		Shift + >> / Preset+
	AD		Shift + Audio / Lang I/II
	Timer Prog		Shift + Sleep / Timer
	Option		Shift + Setup / OPT / Tools

Original		Substituto	
	→/V.Skip		Shift + Right
	Clear		Shift + Exit / Cancel / Clear
	A1		Shift + 1
	Disc		Shift + 3
	HDD		Shift + 7

