




 

 

 
 
 

 

 

 

 
 

 


 


Original	Substituto
 Power	 Power
 Mute	 Mute
 TV	 TV/R
 Radio	 Shift + TV/R
 Rec-Menu / Clock	 AV
 Rec-Menu / Clock	 Shift + Rec
 Rec-Menu / Clock	 Options
 Title	 Smart
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Substituto
 9	 9
 0	 0
 EPG	 Guide
 PIP	 Format
 Assist	 Media
 Text / Disc-M	 Text
 Text / Disc-M	 D. Menu
 Menu	 Menu
 End	 Exit
 Info	 Info
 V+	 Vol +
 V-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right





Original	Substituto	Original	Substituto
 Left	 Left		
 OK	 Ok		
 Red / C-Set	 Red		
 Green / SV	 Green		
 Yellow / Zoom	 Yellow		
 Blue / Marker	 Blue		
 Play	 Play		
 <<	 <<		
 >>	 >>		
 Rec	 Rec		
 Pause	 Pause		
 Stop	 Stop		

