





 









 



 

 















 













 

















 



 




Original	Substituto	Original	Substituto
 POWER	 Power	 CH+	 CH+ / Page+
 SOURCE	 AV / Input / RDS	 CH-	 CH- / Page-
 1	 1	 CH LIST	 Smart / List
 2	 2	 MENU	 Menu / Home
 3	 3	 MEDIA.P	 Display / Media
 4	 4	 GUIDE	 Guide / EPG / -/-
 5	 5	 TOOLS	 Setup / OPT /
 6	 6	 INFO	 Info / Angle
 7	 7	 RETURN	 Back / Return
 8	 8	 EXIT	 Exit / Cancel / Clear
 9	 9	 UP	 Up
 0	 0	 DOWN	 Down
 TTX/MIX	 Text / Goto	 RIGHT	 Right
 PRE-CH	 Fav / Marker / PC	 LEFT	 Left
 VOL+	 Vol+	 OK	 OK
 VOL-	 Vol-	 RED	 Red / Netflix / Search
 MUTE	 Mute / Dimmer	 GREEN	 Green / APP / Repeat

Original	Substituto	Original	Substituto
 POWER	 Power	 CH+	 CH+ / Page+
 SOURCE	 AV / Input / RDS	 CH-	 CH- / Page-
 1	 1	 CH LIST	 Smart / List
 2	 2	 MENU	 Menu / Home
 3	 3	 MEDIA.P	 Display / Media
 4	 4	 GUIDE	 Guide / EPG / -/-
 5	 5	 TOOLS	 Setup / OPT /
 6	 6	 INFO	 Info / Angle
 7	 7	 RETURN	 Back / Return
 8	 8	 EXIT	 Exit / Cancel / Clear
 9	 9	 UP	 Up
 0	 0	 DOWN	 Down
 TTX/MIX	 Text / Goto	 RIGHT	 Right
 PRE-CH	 Fav / Marker / PC	 LEFT	 Left
 VOL+	 Vol+	 OK	 OK
 VOL-	 Vol-	 RED	 Red / Netflix / Search
 MUTE	 Mute / Dimmer	 GREEN	 Green / APP / Repeat





Original	Substituto	Original	Substituto
	YELLOW Yellow / YouTube / Repeat		Yellow / YouTube / Repeat
	BLUE Blue / Prime Video / Random		Blue / Prime Video / Random
	AD Audio / Lang I/II		Audio / Lang I/II
	P.SIZE Zoom / Size		Zoom / Size
	SUBT. Subtitle / EQ		Subtitle / EQ

Original	Substituto	Original	Substituto

