
 

 



 
 
 







 

 







 
 





 
 
 











Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Back		Back
	P.Mode		Shift + Format
	S.Mode		Dual
	Sleep		Sleep

Original	Substituto	Original	Substituto
	NICAM		Smart
	Menu		Menu
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	Display		Info
	Vol +		Vol +
	Vol -		Vol -
	List		List
	Fav List		Pre Ch
	CH +		Ch +
	CH -		Ch -
	TV / Radio		TV/R





Original		Substituto	
	CPG		Media
	Aspect		Format
	Freeze		Pause
	Index		D. Menu
	Cancel		Shift + Back
	Subpage		Subt
	Text		Text
	Reveal		Options
	Size		3D
	Hold		Stop
	Mix		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Cyan		Blue

Original	Substituto

