


 
 
 



 




 

 


 






Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 Info	 Info
 Source	 AV	 Exit	 Exit
 P.Mode	 3D	 FAV.CH	 Pre Ch
 S.Mode	 Shift + Dual	 Sleep	 Sleep
 Audio/I-II	 Dual	 Jump	 Options
 P.Size	 Format	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red/D.Setup	 Red
 0	 0	 Green/Repeat	 Green

Original	Substituto	Original	Substituto
 Menu	 Menu	 Up	 Up
 Info	 Info	 Down	 Down
 Exit	 Exit	 Right	 Right
 FAV.CH	 Pre Ch	 Left	 Left
 Sleep	 Sleep	 OK	 Ok
 Jump	 Options	 Vol+	 Vol +
 Up	 Up	 Vol-	 Vol -
 Down	 Down	 P+	 Ch +
 Right	 Right	 P-	 Ch -
 Left	 Left	 Red/D.Setup	 Red
 OK	 Ok	 Green/Repeat	 Green
 Vol+	 Vol +		
 Vol-	 Vol -		
 P+	 Ch +		
 P-	 Ch -		
 Red/D.Setup	 Red		
 Green/Repeat	 Green		



