





 
 

 



 

 





 

 
 
 
 
 
 


 


 


 



 

 

 



 











 










Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	[<>]		Format
	♪		Dual
	[ ]		3D
	PAT		Smart
	PIP Sel		Play
	PIP Pos		Pause
	PIP Size		Stop
	AV		AV
	PC		Media
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Zoom		Eject
	Swap		Pre Ch
	Swap		Back
	PR-		Ch -
	PR+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK / Freeze		Ok





Original	Substituto
Info	Info
Menu	Menu
[ + ]	Options
[ ? ]	D. Menu
[ ◆ ]	Subt
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Text / Mix	Text
[ ≡ x ]	Exit
[ ≡ ≡ ]	Guide

Original	Substituto

