







 



 
 






 







 



 



 










 




 


 
 



 





 





Original	Substituto	Original	Substituto
 Power	 Power	 Q.View	 Display / Media
 Tv/Rad	 TV/Radio /	 Vol+	 Vol+
 Subtitle	 Subtitle / EQ	 FAV	 Fav / Marker / PC
 AD	 Audio / Lang I/II	 P+	 CH+ / Page+
 Ratio	 Picture / Format	 Vol-	 Vol-
 Input	 AV / Input / RDS	 Guide	 Guide / EPG / -/-
 1	 1	 P-	 CH- / Page-
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 Text	 Text / Goto
 4	 4	 Info	 Info / Angle
 5	 5	 T.Opt.	 Setup / OPT /
 6	 6	 Settings	 Menu / Home
 7	 7	 Up	 Up
 8	 8	 Q.Menu	 D.Menu / Top
 9	 9	 Left	 Left
 List	 Smart / List	 OK	 OK
 0	 0	 Right	 Right



