






 





 


 



 

 
 

 


 


















 

 

 

 
 



 

 

 
 








Original	Substituto	Original	Substituto
	On		Power
	Off		Shift + Power
	Rec		Rec
	Pause		Pause
	Stop		Stop
	<<		<<
	Play		Play
	>>		>>
	I<		I<<
	>I		>>I
	←		Pre Ch
	TV		TV/R
	(i)		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	*		Smart





Original		Substituto		Original		Substituto	
#	#	APP MEDIA	Media				
CLEAR	Clear	CLEAR EXIT	Exit				
[T]	[T]	TOP MENU MENU	Menu				
[:≡]	[:≡]	- / - GUIDE	Guide				
ENTER	Enter	RETURN BACK	Back				
Red	Red	A	Red				
Green	Green	B	Green				
Yellow	Yellow	C	Yellow				
Blue	Blue	D	Blue				

