




 

 



 



 

 

 

 

 




 
 
 






 


 



 

 

 












 

 

 

 




Original	Substituto	Original	Substituto
	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Video Out		AV
	<<		<<
	>>		>>
	Pause		Pause
	Stop		Stop
	Play		Play
	I<<		I<<
	>>I		>>I
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu DVD		Menu
	Setup		Options
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Language		Dual
	Angle		TV/R
	Subtitle		Subt





Original	Substituto
 Progressive Scan	 Format
 Repeat	 Text
 Random	 3D
 Zoom	 Shift + Eject
 OSD	 Pre Ch
 A-B	 List
 PBC	 Back
 L/R	 Info
 Program	 Sleep
 Sub-Menu	 D. Menu

Original	Substituto

