





 



 

 
 
 



 


 
 
 
 
 
 

 



 

 

 


 
 



 


 

 
 
 
 

 

 
 
 
 

 









Original	Substituto	Original	Substituto
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Exit	 Exit
 9	 9	 Menu	 Menu
 0	 0	 Red/DVD Setup	 Red
 CH.List	 List	 Green/Repeat	 Green
 Recall	 Pre Ch	 Yellow/Languag	 Yellow
 PIC.Mode	 Shift + Format	 Blue/DVD Menu	 Blue
 S.Mode	 Shift + Dual	 Title/Aspect	 3D
 Source	 AV	 Zoom/Tv/Radio	 TV/R





Original	Substituto	Original	Substituto
	Sleep		Sleep
	Subtitle		Subt
	Prog/Index	+	Shift + Sleep
	A-B/Reveal		Media
	Step/Audio		Dual
	Info/Display		Info
	Text		Text
	Size		Format
	Hold		Options
	Subpage		Guide
	Eject		Eject
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	<<		<<

