









 
 



 




 

 



























 



















Original	Substituto	Original	Substituto
 Power	 Power	 Mute	 Mute
 Internet	 Smart	 P+	 Ch +
 Tv/Radio	 TV/R	 P-	 Ch -
 1	 1	 Recall	 Pre Ch
 2	 2	 Menu	 Menu
 3	 3	 Music/Video/Photo	 Media
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 i	 Info	 FAV	 Shift + Pre Ch
 EPG	 Guide	 LIB	 Format
 Vol+	 Vol +	 OPT	 Options
 Vol-	 Vol -	 Text	 Text





Original		Substituto		Original		Substituto	
	Subt.		Subt				
	Audio		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

