






 

 

 

 



 

 

 

 

 
 


 
 





 


 
 

 











 
 
Original	Substituto	Original	Substituto
	Power		Power
	TV/DTV		Smart
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Info		Info
	FAV		Shift + Pre Ch
	Picture		Shift + Format

Original	Substituto	Original	Substituto
	Sound		Shift + Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I/II		Dual
	Still		Format
	Zoom		Eject
	Exit		Exit





	Original	Substituto	
	Radio	 TV/R	
	Next	 >>I	
	Lang	 List	
	Subtitle	 Subt	
	Back	 Back	
	Forward	 >>	
	Play	 Play	
	Pause	 Pause	
	Stop	 Stop	
	Red	 Red	
	Green	 Green	
	Yellow	 Yellow	
	Blue	 Blue	
	Text	 Text	
	Size/PIP	 3D	
	Reveal/Swap	 Options	
	Cancel/CH Up	 Shift + Ch +	

	Original	Substituto	
	Mix/CH Down	 Shift + Ch -	
	Subcode/Source	 Shift + AV	
	Index/Position	 Media	
	Hold/Sleep	 Sleep	

