 





































Original	Substituto
 Power	 Power
 TV / DTV	 Setup / OPT /
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Info	 Info / Angle
 FAV	 Fav / Marker / PC
 Picture	 Picture / Format

Original	Substituto
 Sound	 Sound / Title
 Vol +	 Vol+
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 CH -	 CH- / Page-
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 I / II	 Audio / Lang I/II
 Still	 Pause / Step / Freeze
 Zoom	 Zoom / Size
 Exit	 Exit / Cancel / Clear





Original	Substituto
Radio / Browse	TV/Radio /
T.Shift / Rotate	D.Menu / Top
Lang / Page up	Shift + Audio / Lang I/II
Lang / Page up	Shift + CH+ /
Subtitle / Page down	Subtitle / EQ
Subtitle / Page down	Shift + CH- /
DMP	Smart / List
PVR	Display / Media
Play / Pause	Play / Slow
Stop	Stop / Hold
Red / <<<	Red / Netflix / Search
Red / <<<	<<< / Tune-
Green / >>>	Green / APP / Repeat
Green / >>>	>>> / Tune+
Yellow / I<<<	Yellow / YouTube / Repeat
Yellow / I<<<	I<<< / Preset-
Blue / >>>I	Blue / Prime Video / Random

Original	Substituto
Blue / >>>I	>>>I / Preset+
Text	Text / Goto
Size	Shift + Zoom /
Reveal	Shift + Smart / List
Cancel	Shift + Exit / Cancel / Clear
Hold / Sleep	Sleep / Timer
Hold / Sleep	Shift + Stop /
Index	Shift + Display / Media
Sub.Code	Eject / Surround
Mix	Shift + Text /

