



Original	Substituto
 Mute	 Mute / Dimmer
 Power	 Power
 Picture	 Picture / Format
 Sound	 Sound / Title
 Multimedia	 Display / Media
 Source	 AV / Input / RDS
 Aspect	 Shift + Picture / Format
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Recall	 Back / Return
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 Menu	 Menu / Home
 Right / Vol +	 Vol+
 Right / Vol +	 Right
 Prev PR	 Fav / Marker / PC
 Down / PR -	 Down

Original	Substituto
 Down / PR -	 CH- / Page-
 OK	 OK
 Red / P.Mode	 Red / Netflix / Search
 Green / P.Still	 Green / APP / Repeat
 Yellow / P.Swap	 Yellow / YouTube / Repeat
 Blue / P.Input	 Blue / Prime Video / Random
 Dynamic Bass	 Smart / List
 3D - Panorama	 TV/Radio /
 P.PR +	 Shift + CH+ /
 Audio I / II	 Audio / Lang I/II
 Still	 Pause / Step / Freeze
 P.PR -	 Shift + CH- /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Substituto	Original	Substituto
[6]	6	[TUNER 6]	6
[7]	7	[AUX-HDD 7]	7
[8]	8	[USB 8]	8
[9]	9	[BLUETOOTH 9]	9
[Lock]	Lock	[CLEAR EXIT CANCEL]	Exit / Cancel / Clear
[0]	0	[HDMI - BAT 0]	0
[Sleep]	Sleep	[TIMER SLEEP]	Sleep / Timer
[≡]	[≡]	[GOTO TEXT]	Text / Goto
[≡?]	[≡?]	[SURROUND ▲]	Eject / Surround
[≡X]	[≡X]	[EQ SUBTITLE]	Subtitle / EQ
[≡]	Size	[SIZE ZOOM]	Zoom / Size
[≡o]	[≡o]	[GUIDE EPG]	Guide / EPG / -/--
[≡]	Hold	[HOLD ■]	Stop / Hold
[ / ≡]	[ / ≡]	[OPT-TOOLS SETUP]	Setup / OPT /
[≡i]	[≡i]	[ANGLE INFO]	Info / Angle

Original	Substituto	Original	Substituto

