 







 

 
 





 
 

 
 
 

 
 
 





Original	Substituto	Original	Substituto
	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	Null		Shift + Eject
	Vol+		Vol +
	Vol-		Vol -
	Aspect		3D
	Audio		Dual
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Input		AV
	PMode		Shift + Format
	Ch.List		List
	SMode		Shift + Dual
	FAV		Pre Ch





Original	Substituto	Original	Substituto
 EPG	 Guide	 >>I	 >>I
 TV/Radio	 TV/R	 I<<	 I<<
 Subtitle	 Subt	 Red	 Red
 Text	 Text	 Green	 Green
 Index	 Smart	 Yellow/ (A)	 Yellow
 Mix	 Eject	 Blue	 Blue
 Hold	 Media		
 Reveal	 Options		
 Subpage	 Shift + Subt		
 Cancel	 D. Menu		
 Size	 Format		
 Rec	 Rec		
 Stop	 Stop		
 Play	 Play		
 T-Shift/Pause	 Pause		
 <<	 <<		
 >>	 >>		

Original	Substituto	Original	Substituto
 >>I	 >>I		
 I<<	 I<<		
 Red	 Red		
 Green	 Green		
 Yellow/ (A)	 Yellow		
 Blue	 Blue		

