



Original	Substituto	Original	Substituto
Guide	Guide / EPG / -/--		Play
Power	Power		Pause
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random	I<<	I<< / Preset-
FAV	Fav / Marker / PC	>>I/Index	>>I / Preset+
Text	Text / Goto	Menu	Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep
Media	Shift + Display / Media		Down

Original	Substituto	Original	Substituto
	Play / Slow		TV
	Pause / Step / Freeze		DVD
	<< / Tune-		SAT
	>> / Tune+		AUX
	Setup / OPT /		SLOW STEP-FREEZE
Rec	Rec / Rec Mode		HOLD
Stop	Stop / Hold		PRESET-
I<<	I<< / Preset-		PRESET+
>>I/Index	>>I / Preset+		HOME MENU
Menu	Menu / Home		LANG I/II
Lang/Audio	Audio / Lang I/II		UP
	Up		LEFT
	Left		OK
	OK		RIGHT
	Right		SLEEP
	Sleep		DOWN
	Down		



