 




Original	Substituto
 Standby	 Power
 Source	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 P.Mode	 Shift + Sleep / Timer
 S.Mode	 Shift + Audio / Lang I/II
 Freeze	 TV/Radio /
 TXT	 Setup / OPT /
 Mix/FAV List	 Fav / Marker / PC
 Size	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Cancel/Audio	 Audio / Lang I/II
 Record	 Rec / Rec Mode
 << / Index	 >> / Tune+
 >> / Hold	 I<< / Preset-

Original	Substituto
 I<< / Reveal	 << / Tune-
 >>I / Subpage	 >>I / Preset+
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Down	 Down
 Stop	 Stop / Hold
 EPG	 Guide / EPG / -/-
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-





	Original	Substituto		Original	Substituto
	Tv/Radio	 Zoom / Size			
	CH-	 CH- / Page-			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	Display	 Info / Angle			
	0	 0			
	Recall	 Back / Return			

	Original	Substituto		Original	Substituto

