 

 
 
 
 
 

 

 

 
 
 

 

 

 
 
 
 
 

 
 

 





 


 


 
 
 
 
 
 
 



 
 
 
 
 
 

 
 


 


 






Original	Substituto	Original	Substituto
	Power		Power
	SD Card		List
	Tv Input		TV/R
	AV Input		AV
	Menu		Menu
	[+]/Aspect		3D
	Internet		Smart
	Direct Tv Rec		Shift + TV/R
	i		Info
	Exit		Exit
	Viera Link		D. Menu
	Viera Tools		Media
	Option		Options
	Guide		Guide
	Return/Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]/Text		Text
	[≡◆]/STTL		Subt
	[≡i]/Index		Dual
	[≡+]/Hold		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original	Substituto	Original	Substituto
 7	 7	 Programme Up	 Shift + Ch +
 8	 8	 Programme Down	 Shift + Ch -
 9	 9	 Power DVD/VCR	 Shift + Ok
 0	 0	 Rec DVD/VCR	 Shift + Rec
 Last View	 Pre Ch	 <</I<<	 Shift + I<<
 Vol+	 Vol +	 >/>>I DVD/VCR	 Shift + >>I
 Vol-	 Vol -	 Play DVD/VCR	 Shift + Play
 Mute	 Mute	 Pause/Step	 Shift + Pause
 CH+	 Ch +	 Stop DVD/VCR	 Shift + Stop
 CH-	 Ch -	 Programme Up DVD/VCR	 Shift + Up
 Power Down Tv	 Shift + Power	 Programme Down DVD/VCR	 Shift + Down
 Stop Tv	 Stop		
 Play Tv	 Play		
 Pause/Step Tv	 Pause		
 >>/>>I Tv	 >>I		
 <</I<< TV	 I<<		
 Rec TV	 Rec		

Original	Substituto
 Programme Up	 Shift + Ch +
 Programme Down	 Shift + Ch -
 Power DVD/VCR	 Shift + Ok
 Rec DVD/VCR	 Shift + Rec
 <</I<<	 Shift + I<<
 >/>>I DVD/VCR	 Shift + >>I
 Play DVD/VCR	 Shift + Play
 Pause/Step	 Shift + Pause
 Stop DVD/VCR	 Shift + Stop
 Programme Up DVD/VCR	 Shift + Up
 Programme Down DVD/VCR	 Shift + Down

