
 
 



 
 

 
 






 



 
 


 

 


 








Original	Substituto	Original	Substituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 List	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Substituto	Original	Substituto
8	 8	Tune-	 <<
9	 9	Tune+	 >>
Guide -/-- 1.	 Guide	Store	 3D
0/10	 0	Tone-	 +  Shift + Down
2.Fav P/C 2.	 Pre Ch	Color- S.Std	 +  Shift + Dual
Red	 Red	Browse	 Media
Green	 Green	Tone+	 +  Shift + Up
Yellow	 Yellow	Bright+ Mode	 +  Shift + Menu
Blue	 Blue	Search	 +  Shift + TV/R
Rotate Text	 +  Shift + Text	Contrast+	 +  Shift + Ch +
Audio-	 +  Shift + Left	Contrast-	 +  Shift + Ch -
Audio+	 +  Shift + Right	On Pip	 +  Shift + 1
Off/Tim	 Pause	Swap	 +  Shift + 2
On/Tim	 Play	Rotate Pip	 +  Shift + 3
Color+ P.Std	 Format	Surround	 +  Shift + Red
Aft/Caf	 Options	Nicam/Mono	 +  Shift + Green
Game Coo	 +  Shift + Eject	Level L	 +  Shift + Yellow



Original	Substituto	Original	Substituto
Level R/Woofers	 +  Shift + Blue		

