
 




Original	Substituto	Original	Substituto
 Power	 Power	 Left	 Left
 Red/Rec/Instant	 Red	 Vol+	 Vol +
 Green/Left	 Green	 Vol-	 Vol -
 Yellow/Stop	 Yellow	 Mute	 Mute
 Blue/play	 Blue	 P+	 Ch +
 White/Right	 >>	 P-	 Ch -
 >◆	 D. Menu	 1	 1
 [ I ]	 Guide	 2	 2
 [o]/Timer	 Sleep	 3	 3
 [?]	 Eject	 4	 4
 [◆]	 Format	 5	 5
 [≡]/Text	 Text	 6	 6
 Menu	 Menu	 7	 7
 OK	 Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 Pre Ch





Original	Substituto	Original	Substituto
	[i+]		Info
	I-II		Dual
	[> <]		Subt
	[1 2]		3D
	[ ]->		AV
	Smart		Smart
	[ ] Smart		Media
	[ <> ]		Back
	[-o-]/Active Control		Options





Original	Substituto	Original	Substituto
 Power	 Power	 Vol-	 Vol -
 Red/Rec/Instant	 Red	 Mute	 Mute
 Green/ <<	 Green	 P+	 Ch +
 Yellow/Stop	 Yellow	 P-	 Ch -
 Blue/Play	 Blue	 1	 1
 White/ >> / □	 >>	 2	 2
 [o]/Timer	 SLEEP Sleep	 3	 3
 [?]	 Eject	 4	 4
 [◆]	 Format	 5	 5
 [≡]/Text	 Text	 6	 6
 Menu	 Menu	 7	 7
 OK	 Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 Pre Ch
 Left	 Left	 [i+]	 Info
 Vol+	 Vol +	 I-II	 Dual






Original		Substituto		Original		Substituto	
	[> <]		Subt				
	[1 2]		3D				
	[ ]→		AV				
	♪ Smart		Smart				
	[ ] Smart		Media				
	[ <> ]		Back				
	[-o-]/Active Control		Options				





Original	Substituto	Original	Substituto
 Power	 Power	 Vol-	 Vol -
 Red/Rec/Instant	 Red	 Mute	 Mute
 Green/←	 Green	 P+	 Ch +
 Yellow/Stop	 Yellow	 P-	 Ch -
 Blue/Play	 Blue	 1	 1
 White/→/□	 →	 2	 2
 [o]/Timer	 SLEEP	 3	 3
 [?]	 Eject	 4	 4
 [◆]	 Format	 5	 5
 [≡]/Text	 Text	 6	 6
 Menu	 Menu	 7	 7
 OK	 Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 Pre Ch
 Left	 Left	 [i+]	 Info
 Vol+	 Vol +	 I-II	 Dual





Original	Substituto	Original	Substituto
	[> <]		Subt
	[1 2]		3D
	[ ]→		AV
	♪ Smart		Smart
	[ ] Smart		Media
	[ <> ]		Back
	[-o-]/Active Control		Options

Original	Substituto	Original	Substituto

