



Original	Substituto	Original	Substituto
Power	Power	9	9
EPG	Guide / EPG / -/--	Zoom	Zoom / Size
Teletext	Text / Goto	0	0
Select	Smart / List	Goto	Shift + Text /
Confirm	D.Menu / Top	i/Display	Display / Media
Title	Sound / Title	Guide	Shift + Guide / EPG / -/--
Eject	Eject / Surround	Up	Up
Menu	Menu / Home	Left	Left
Option	Shift + Setup / OPT / Tools	OK	OK
1	1	Right	Right
2	2	Rec	Rec / Rec Mode
3	3	Down	Down
4	4	Return	Back / Return
5	5	Vol-	Vol-
6	6	Vol+	Vol+
7	7	<<	<< / Tune-
8	8	Stop	Stop / Hold

Original	Substituto	Original	Substituto
Power	Power	9	9
EPG	Guide / EPG / -/--	Zoom	Zoom / Size
Teletext	Text / Goto	0	0
Select	Smart / List	Goto	Shift + Text /
Confirm	D.Menu / Top	i/Display	Display / Media
Title	Sound / Title	Guide	Shift + Guide / EPG / -/--
Eject	Eject / Surround	Up	Up
Menu	Menu / Home	Left	Left
Option	Shift + Setup / OPT / Tools	OK	OK
1	1	Right	Right
2	2	Rec	Rec / Rec Mode
3	3	Down	Down
4	4	Return	Back / Return
5	5	Vol-	Vol-
6	6	Vol+	Vol+
7	7	<<	<< / Tune-
8	8	Stop	Stop / Hold



