



Original	Substituto
Standby	Power
AQT/Auto/Open/CI	Eject / Surround
P.Mode	Picture / Format
S.Mode	Sound / Title
List/Angle	Smart / List
Aspect	Shift + Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Back	Back / Return

Original	Substituto
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Audio	Audio / Lang I/II
CH-	CH- / Page-
Sub-T	Subtitle / EQ
Menu	Menu / Home
[i+]/Info	Info / Angle
Input	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
DVD Setup	Shift + 2





Original	Substituto	Original	Substituto
	Rec		Rec / Rec Mode
	Sleep		Sleep / Timer
	Red/D.Prog		Red / Netflix / Search
	Tv/R		TV/Radio /
	Green/Step		Green / APP / Repeat
	Yellow/RPT		Yellow / YouTube / Repeat
	Blue/A-B/SCR		Blue / Prime Video / Random
	[≡]/Slow		Shift + Play /
	[≡▲]/Stop		Shift + Up
	[≡▼]/Zoom		Shift + Down
	[≡i]/I<<		I<< / Preset-
	Play		Play / Slow
	[+]/Pause		Pause / Step / Freeze
	[+]/>>I		>>I / Preset+
	[≡?]/<<		<< / Tune-
	EPG/D.Menu		Guide / EPG / -/--
	[≡o]/>>		>> / Tune+

