


 
 


 
 

 









 



 







 







 







 





 
 
 




 


 




Original	Substituto	Original	Substituto
 Power	 Power	 Yellow	 Yellow
 Play	 Play	 Blue	 Blue
 Pause	 Pause	 CH+	 Ch +
 <<<	 <<<	 CH-	 Ch -
 >>>	 >>>	 Source	 AV
 <<<	 <<<	 Vol+	 Vol +
 >>>	 >>>	 Vol-	 Vol -
 Stop	 Stop	 Menu	 Menu
 TV/TXT	 Text	 Rec	 Rec
 Cancel	 Eject	 Up	 Up
 Reveal	 D. Menu	 Down	 Down
 Hold	 Media	 Right	 Right
 Size	 3D	 Left	 Left
 Subpage	 Shift + Subt	 OK	 Ok
 Index	 List	 DVB	 Smart
 Red	 Red	 Exit	 Exit
 Green	 Green	 1	 1





Original		Substituto		Original		Substituto	
2	2	2	2	FAV	FAV	FAV PRE-CH	Pre Ch
3	3	3	3	FAV+	FAV+	SHIFT + + CH	Shift + Ch +
4	4	4	4	FAV-	FAV-	SHIFT + - CH	Shift + Ch -
5	5	5	5	SUBTITLE	Subtitle	AD SUBT	Subt
6	6	6	6	PIC FORMAT	Pic Format	PICTURE FORMAT	Format
7	7	7	7	TEXT	Text	SHIFT + REPEAT TEXT	Shift + Text
8	8	8	8	DISPLAY	Display	DISPLAY INFO	Info
9	9	9	9	LANGUAGE	Language	SOUND DUAL	Dual
0	0	0	0	EPG	EPG	GUIDE	Guide
-/--	-/--	SHIFT + -/-- GUIDE	Shift + Guide				
↻	Recall	RETURN BACK	Back				
PICTURE	Picture	SHIFT + PICTURE FORMAT	Shift + Format				
SOUND	Sound	SHIFT + SOUND DUAL	Shift + Dual				
NICAM/A2	Nicam/A2	SETTINGS OPT	Options				
MUTE	Mute	MUTE	Mute				
SLEEP	Sleep	PROG SLEEP	Sleep				
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R				

