



 
 


 




 


 




 
 




 






 


 



 


 

 
 

 
 


 





 


 

 




 
 








 

 

 





 





 




Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Previous Channel		Back
	Vol +		Vol +
	Vol -		Vol -
	Aspect		Format
	Lang / NICAM		Dual
	Input		AV
	CH +		Ch +
	CH -		Ch -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Menu		Menu
	Exit		Exit
	Display		Info
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep
	FAV		Pre Ch
	FAV -		Shift + Ch -





Original	Substituto
 FAV +	 Shift + Ch +
 EPG	 Guide
 Text	 Text
 Hold	 3D
 TV / Radio	 TV/R
 Subtitle	 Subt
 Index / <<	 <<
 Size / >>	 >>
 Recall / I<<	 I<<
 Subpage / >>I	 >>I
 Rec	 Rec
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 Media	 Media
 Red	 Red
 Green	 Green

Original	Substituto
 Yellow	 Yellow
 Blue	 Blue

